




For Models 7017

## FREDDY FENDERS SPEEDEZ INSTALLATION INSTRUCTIONS

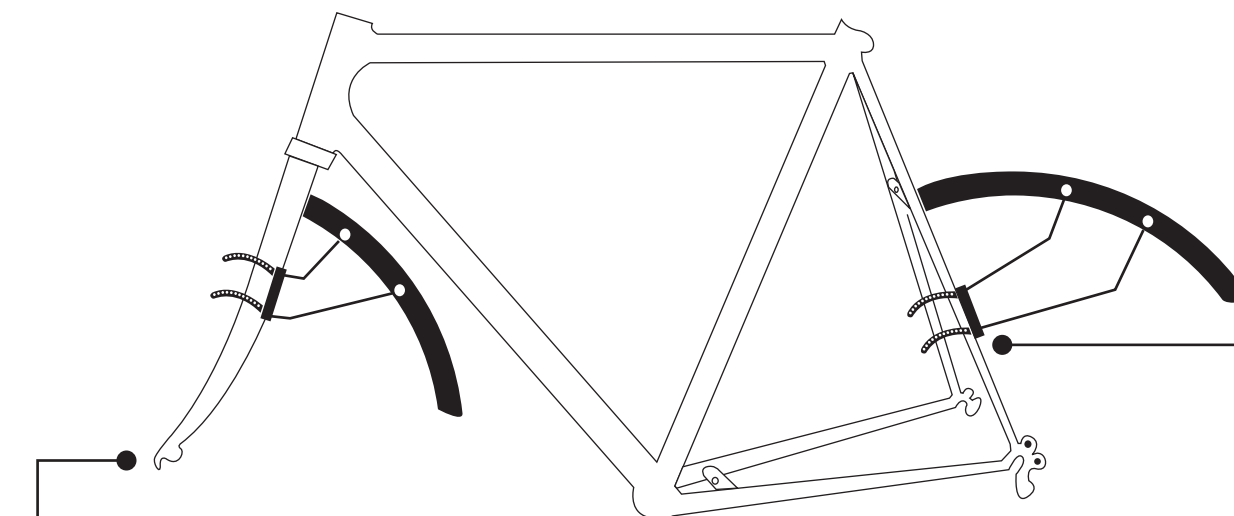

**1** Attach Speedez Quick Attach brackets to fork legs/seat stays by wrapping rubber straps around fork legs/seat stays and looping over bracket hooks. Be sure to pull firmly on straps for a secure fit. Slide adjustable stays through eyelet bolts/ nuts to conform fender to curvature of tire without rubbing. Tighten bolts.

**Note:** For excess portion of rubber straps either:

- A) Double over and loop onto outside hooks or,
- B) Cut off excess making sure to leave enough strap for future removal and installation.

**2** To attach/adjust rear fender height, see step #1.

### TIPS

- Toe clips may touch front fender during slow speed turns on some bikes
- Check nuts and bolts periodically.